

Race Clock – Instructions for Use

The clock has a control panel on the end with four buttons. It also has two power clips on leads for attaching to a car battery or battery pack (supplied).



1. Attach power clips to power source (red on +, black on -) ensuring good connection.
2. Press green START button to start the clock.
3. To stop the clock, press both black buttons together.
4. Press the red RESET button to set the clock back to zero. (Only works when stopped.)
5. If required, use the black SET MINS and SET HRS buttons to pre-set clock to a time. Pressing START will continue on from time shown.

The battery pack supplied should be charged and ready for use, and will have sufficient power to keep the clock going to the maximum time (ie. 9:59:59). Press the **'test'** switch to check that the charge is **'high'**. If **'medium'** or **'low'**, it should be re-charged by plugging into the mains, allowing **an hour after charging before use.**



Note : When connecting the power clips to the battery pack, a beeping noise will be heard when both are connected and the **'reverse polarity'** light will come on. This happens when the unit is switched **off**. The noise will stop when the switch is turned to the **on** position.